Assembly Instruction For FABRIC BACK SIDE CHAIR D.18620.FSC/ ED-D18620FSC

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

- 1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
- 2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
- 3. Please do not over tighten screws or bolts.
- 4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PART LIST FOR CHAIR					
No.	PART DESC	CODE.	Q'TY		
А	Side Chair - Back Frame w/Cushion	PD.18620.FSCBFR	1		
В	Side Chair - Seat Frame w/Cushion	PD.18620.SCSEA	1		
С	Side Chair - Left & Right Front Legs	PD.18620.SCLEG	2		
D	Side Chair - Left & Right Side Stretchers	PD.18620.SCSTR	2		

HARDWARE LIST PACKED INSIDE BOX						
No.		HARDWARE DESC	CODE.	Q'TY		
1	(i)	ALLEN BOLT (1/4" x 40mm)		2		
2	() ()	ALLEN BOLT (1/4" x 60mm)		4		
3	() ()	ALLEN BOLT (1/4" x 75mm)		4		
4	Ø	SPRING WASHER (1/4")	PD.18620.FSCHW	10		
5	0	FLAT WASHER (1/4")		10		
6	()	SCREWS (M4 x 38mm)		4		
7		ALLEN KEY M4		1		

