


**SP BASE ASSEMBLY**

P A R T S	
4	- LEGS
2	- BLOCKS
8	- BOLTS
1	- ALLEN WRENCH
4	- LEVELERS
{ 4	- 10 X 5/8 SCREWS
	OR
{ 4	- GLASS TIPS

\*INSERT ALL 8 BOLTS  
FIRST - THEN TIGHTEN  
BOLTS WITH ALLEN  
WRENCH

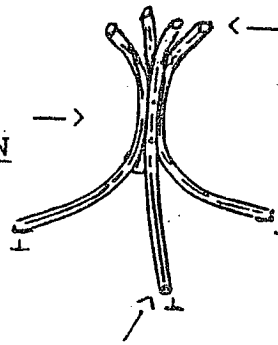

← SCREW TO TOP  
W/ 5/8" SCREW ONLY  
(USE CLEAR LEVELER  
FOR GLASS)

\*NOTE: MAKE SURE METAL TABS ARE NOT  
BLOCKING HOLES. IF THEY ARE, YOU CAN  
BEND OVER WITH A SCREWDRIVER.

THREADED HOLE  
FOR LEVELER