





701 E Industrial Pk Dr
Manchester, NH 03109
sunsettrading.com

Please Contact us if you are
Missing Parts or have any Questions
877-364-8464
info@sunsettrading.com

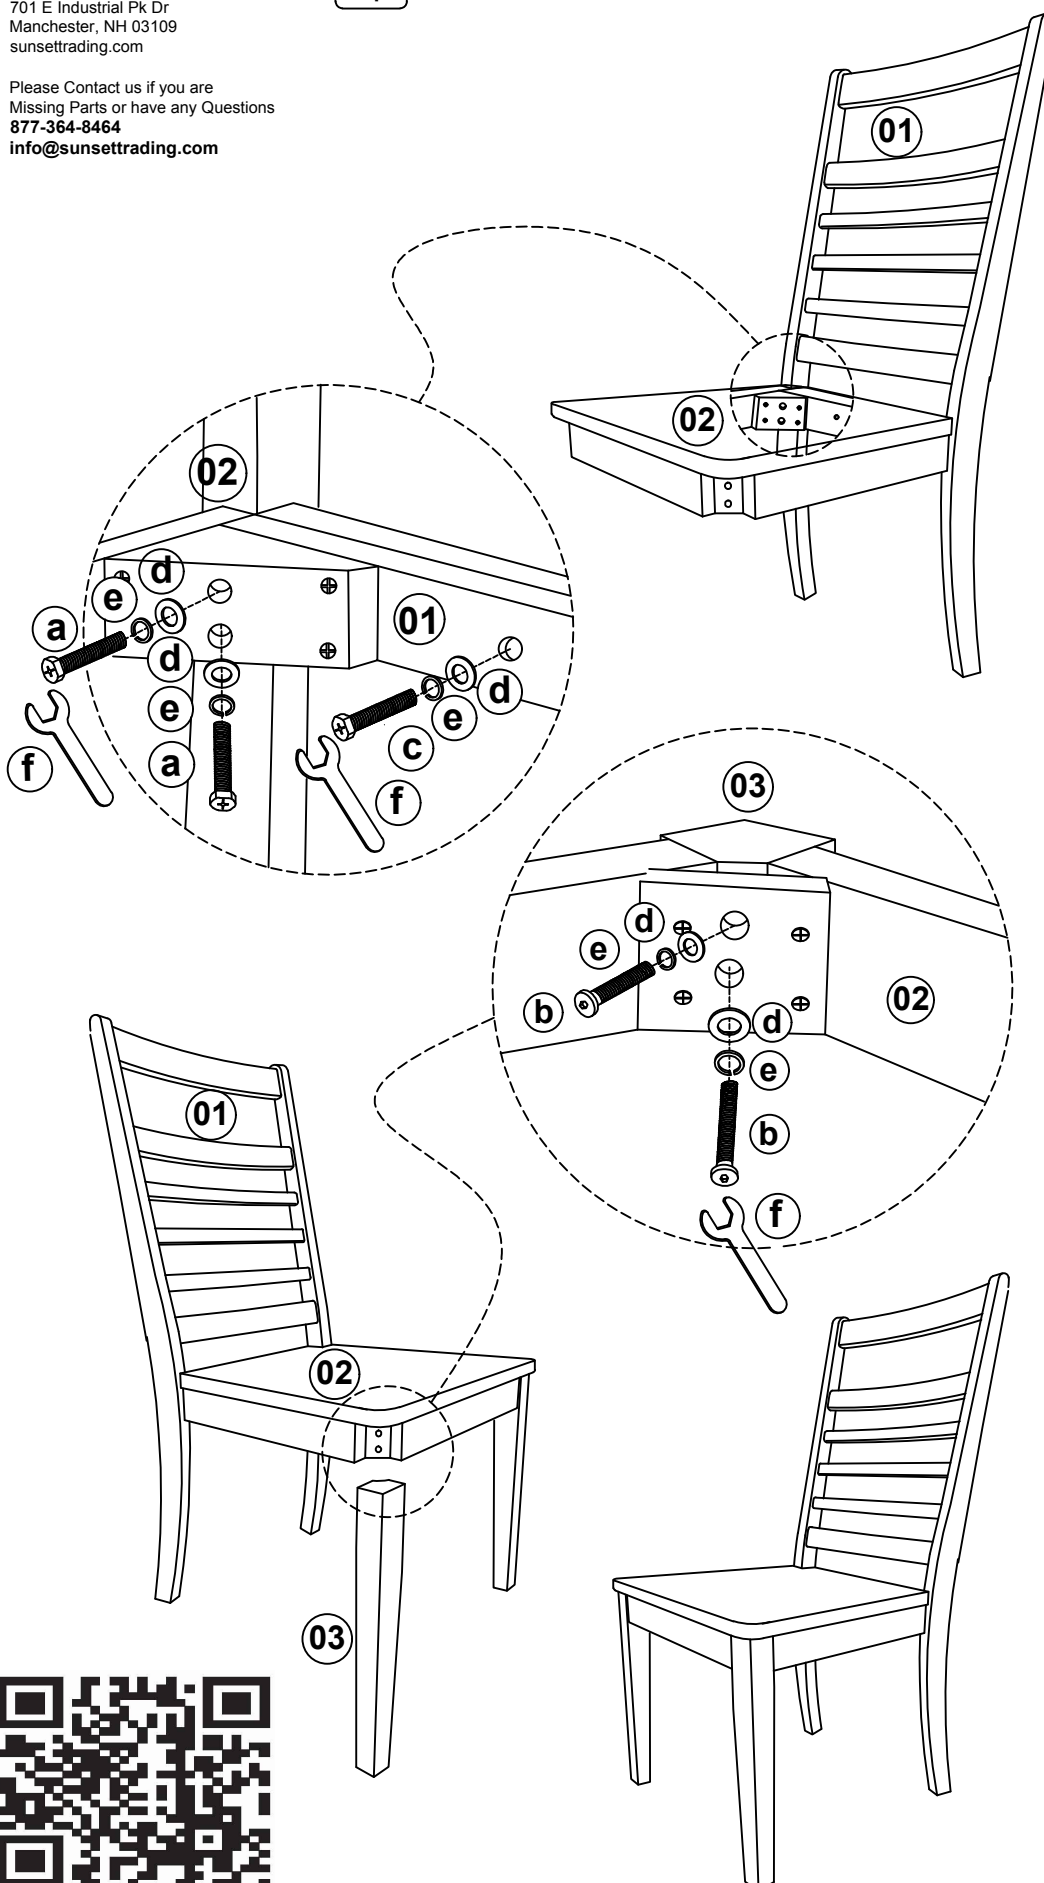





Step 1



List of Parts For 1 Set

| Code | Figure | Part | Qty. |
|------|---|------------|------|
| 01 |  | Back Frame | 1 |
| 02 |  | Seat | 1 |
| 03 |  | Front Leg | 2 |

List of Hardware For 1 Set

| Code | Figure | Hardware | Qty. |
|------|--|----------------------------|------|
| a |  | Hex. Bolt M6 x 80mm | 4 |
| b |  | Hex. Bolt M6 x 60mm | 4 |
| c |  | Hex. Bolt M6 x 40mm | 2 |
| d |  | Flat Washer 1/4" x 18mm | 10 |
| e |  | Spring Washer 1/4" | 10 |
| f |  | Spanner 10mm | 1 |

⚠ IMPORTANT NOTES:

- Keep all hardware and small parts out of reach of children.
- Remove all staples and packing straps before you start to assemble.
- Do not discard main cartons and wrapping material until assembly is complete.
- Check to be sure you have all parts and hardware.
- Place all wooden parts on a clean soft surface to avoid parts from being scratched
- Do not tighten all screws / bolts until completely assembled.
- Check tightness 3x's/year, with use screws can become loose.
- Do not attempt to repair or modify parts that are broken or defective. Please contact us immediately.
- Enjoy your new furniture!

