

# Sunset Trading Contemporary Puff Assembly Instructions

1. Ensure a suitable location has been selected for your modular sectional before assembly.
2. Wooden legs and U Clips are located inside the zippered compartment in the black dust cover under the modular frame.
3. Attach the wooden legs to the corresponding pre-drilled holes by hand turning clockwise until tight. (see Figure 1)
4. Place slipcover on frame, Velcro securely attaches cover under frame. Fluff and fold cushions, place through the zippered opening, push cushion towards corners to fill.
5. If required, plastic U clips are included for connecting pieces together to prevent movement. The U Clips are installed into pre-cut grooves on base and hold pieces in place (see Figure 2)
6. First, connect U Clips to RAF sectional. Second, connect U Clips to LAF sectional. Last, use block to raise the corner and sectional pieces (see Figure 3), then you can use U Clips to connect the corner with sectional pieces by hand.
7. Use a wood block the size of 10 x 3 x 2. Do not use wood block larger than size recommended.
8. The ottoman does not include U Clips to enable it to be easily repositioned.
9. Your modular sectional is now ready for use!

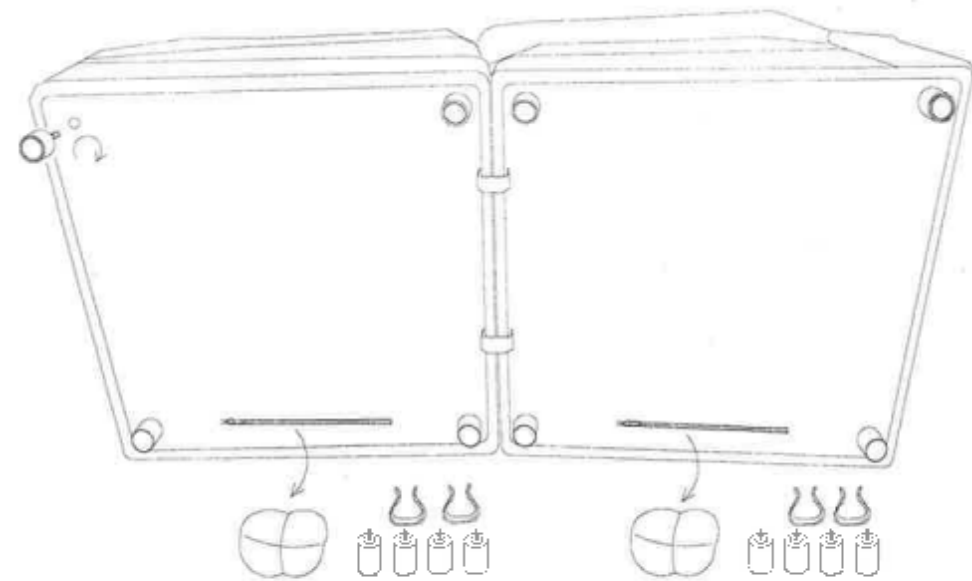


Figure 1


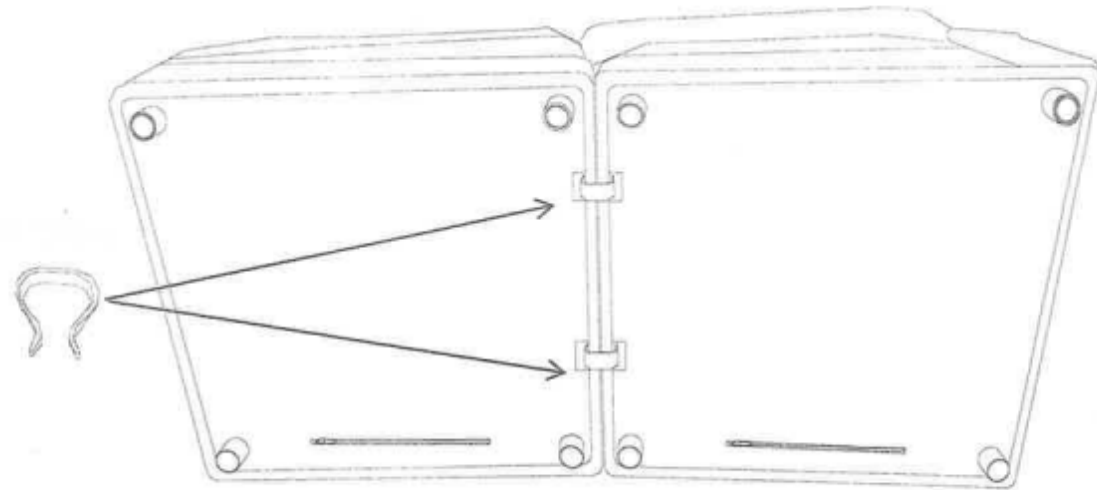


Figure 2

# Sunset Trading Contemporary Puff Assembly Instructions

## Step 1

### RAF Sectional

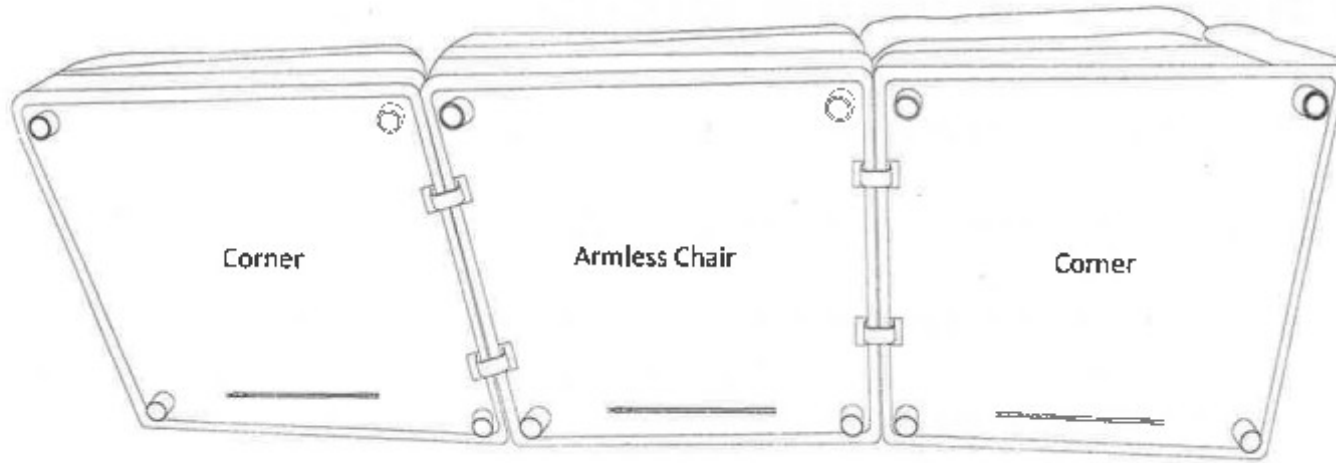

## Step 2

### LAF Sectional

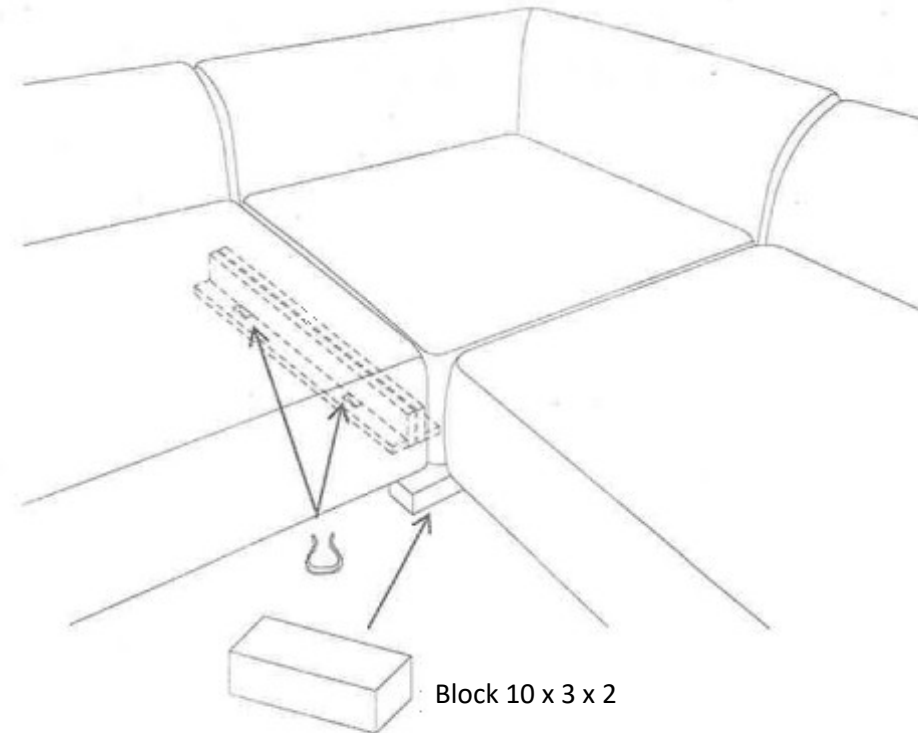
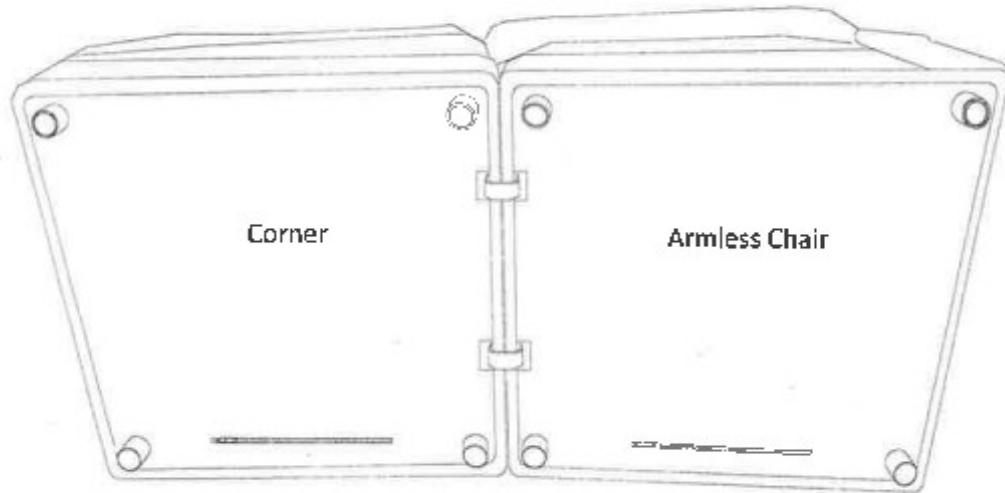


Figure 3