


Assembly Instructions for LN550-660



1. Slide the metal receiver over the metal post. Press both sides of back firmly downward until locked in place

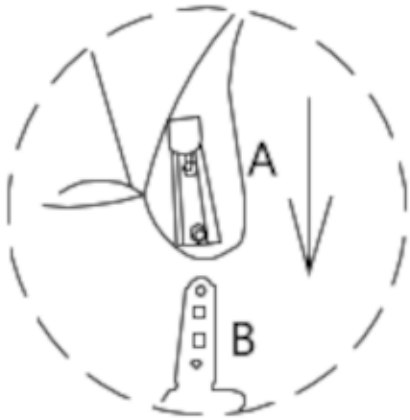